

BOSCH KØKSÚTGERÐ



TAT1201
Bosch
breyðristari
kr. 390,-



TAT8SL1
Bosch
breyðristari
kr. 1.275,-



TWA3000
Bosch
Vaflujarn
kr. 525,-



TFB1001
Bosch
Friturugrýta
kr. 650,-



TDA8318
Bosch
Dampstrúkijarn
kr. 690,-



TDA2115
Bosch
Dampstrúkijarn
kr. 250,-



TKA8SL1
Bosch
Kaffimaskina
kr. 1.650,-



TKA3030
Bosch
Kaffimaskina
kr. 750,-



TKA3031
Bosch
Kaffimaskina
kr. 750,-



TKA1401N
Bosch
Kaffimaskina, hvít
kr. 325,-



TWK8SL1
Bosch
Elektriskur ketil
kr. 1.150,-



TWK7001
Bosch
El-ketil
kr. 450,-



TWK1102N
Bosch
El-ketil
kr. 385,-



TWK4701
Bosch
El-ketil
kr. 385,-



PFP5030
Bosch hitapúta
kr. 525,-



PFP1031
Bosch hitapúta
kr. 290,-



PHD1150
Bosch Hárturkari
kr. 260,-



PHD3200
Bosch hárturkari
kr. 290,-




BKS3042
Bosch
Minidustsúgvari
kr. 675,-



BKS3002
Bosch
Minidustsúgvari
kr. 375,-



MUM7000
Bosch
Køksmaskina
kr. 2.675,-

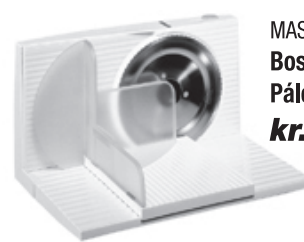

MAS4200
Bosch
Pálegsmaskina
kr. 490,-



MFQ1901
Bosch
handmiksari
kr. 250,-



MFQ2600
Bosch
handmiksari
kr. 575,-



MFQ2700
Bosch miksari
kr. 650,-



MSM6A50
Bosch
Stavblendari
kr. 840,-

pf **Klement Petersen**